

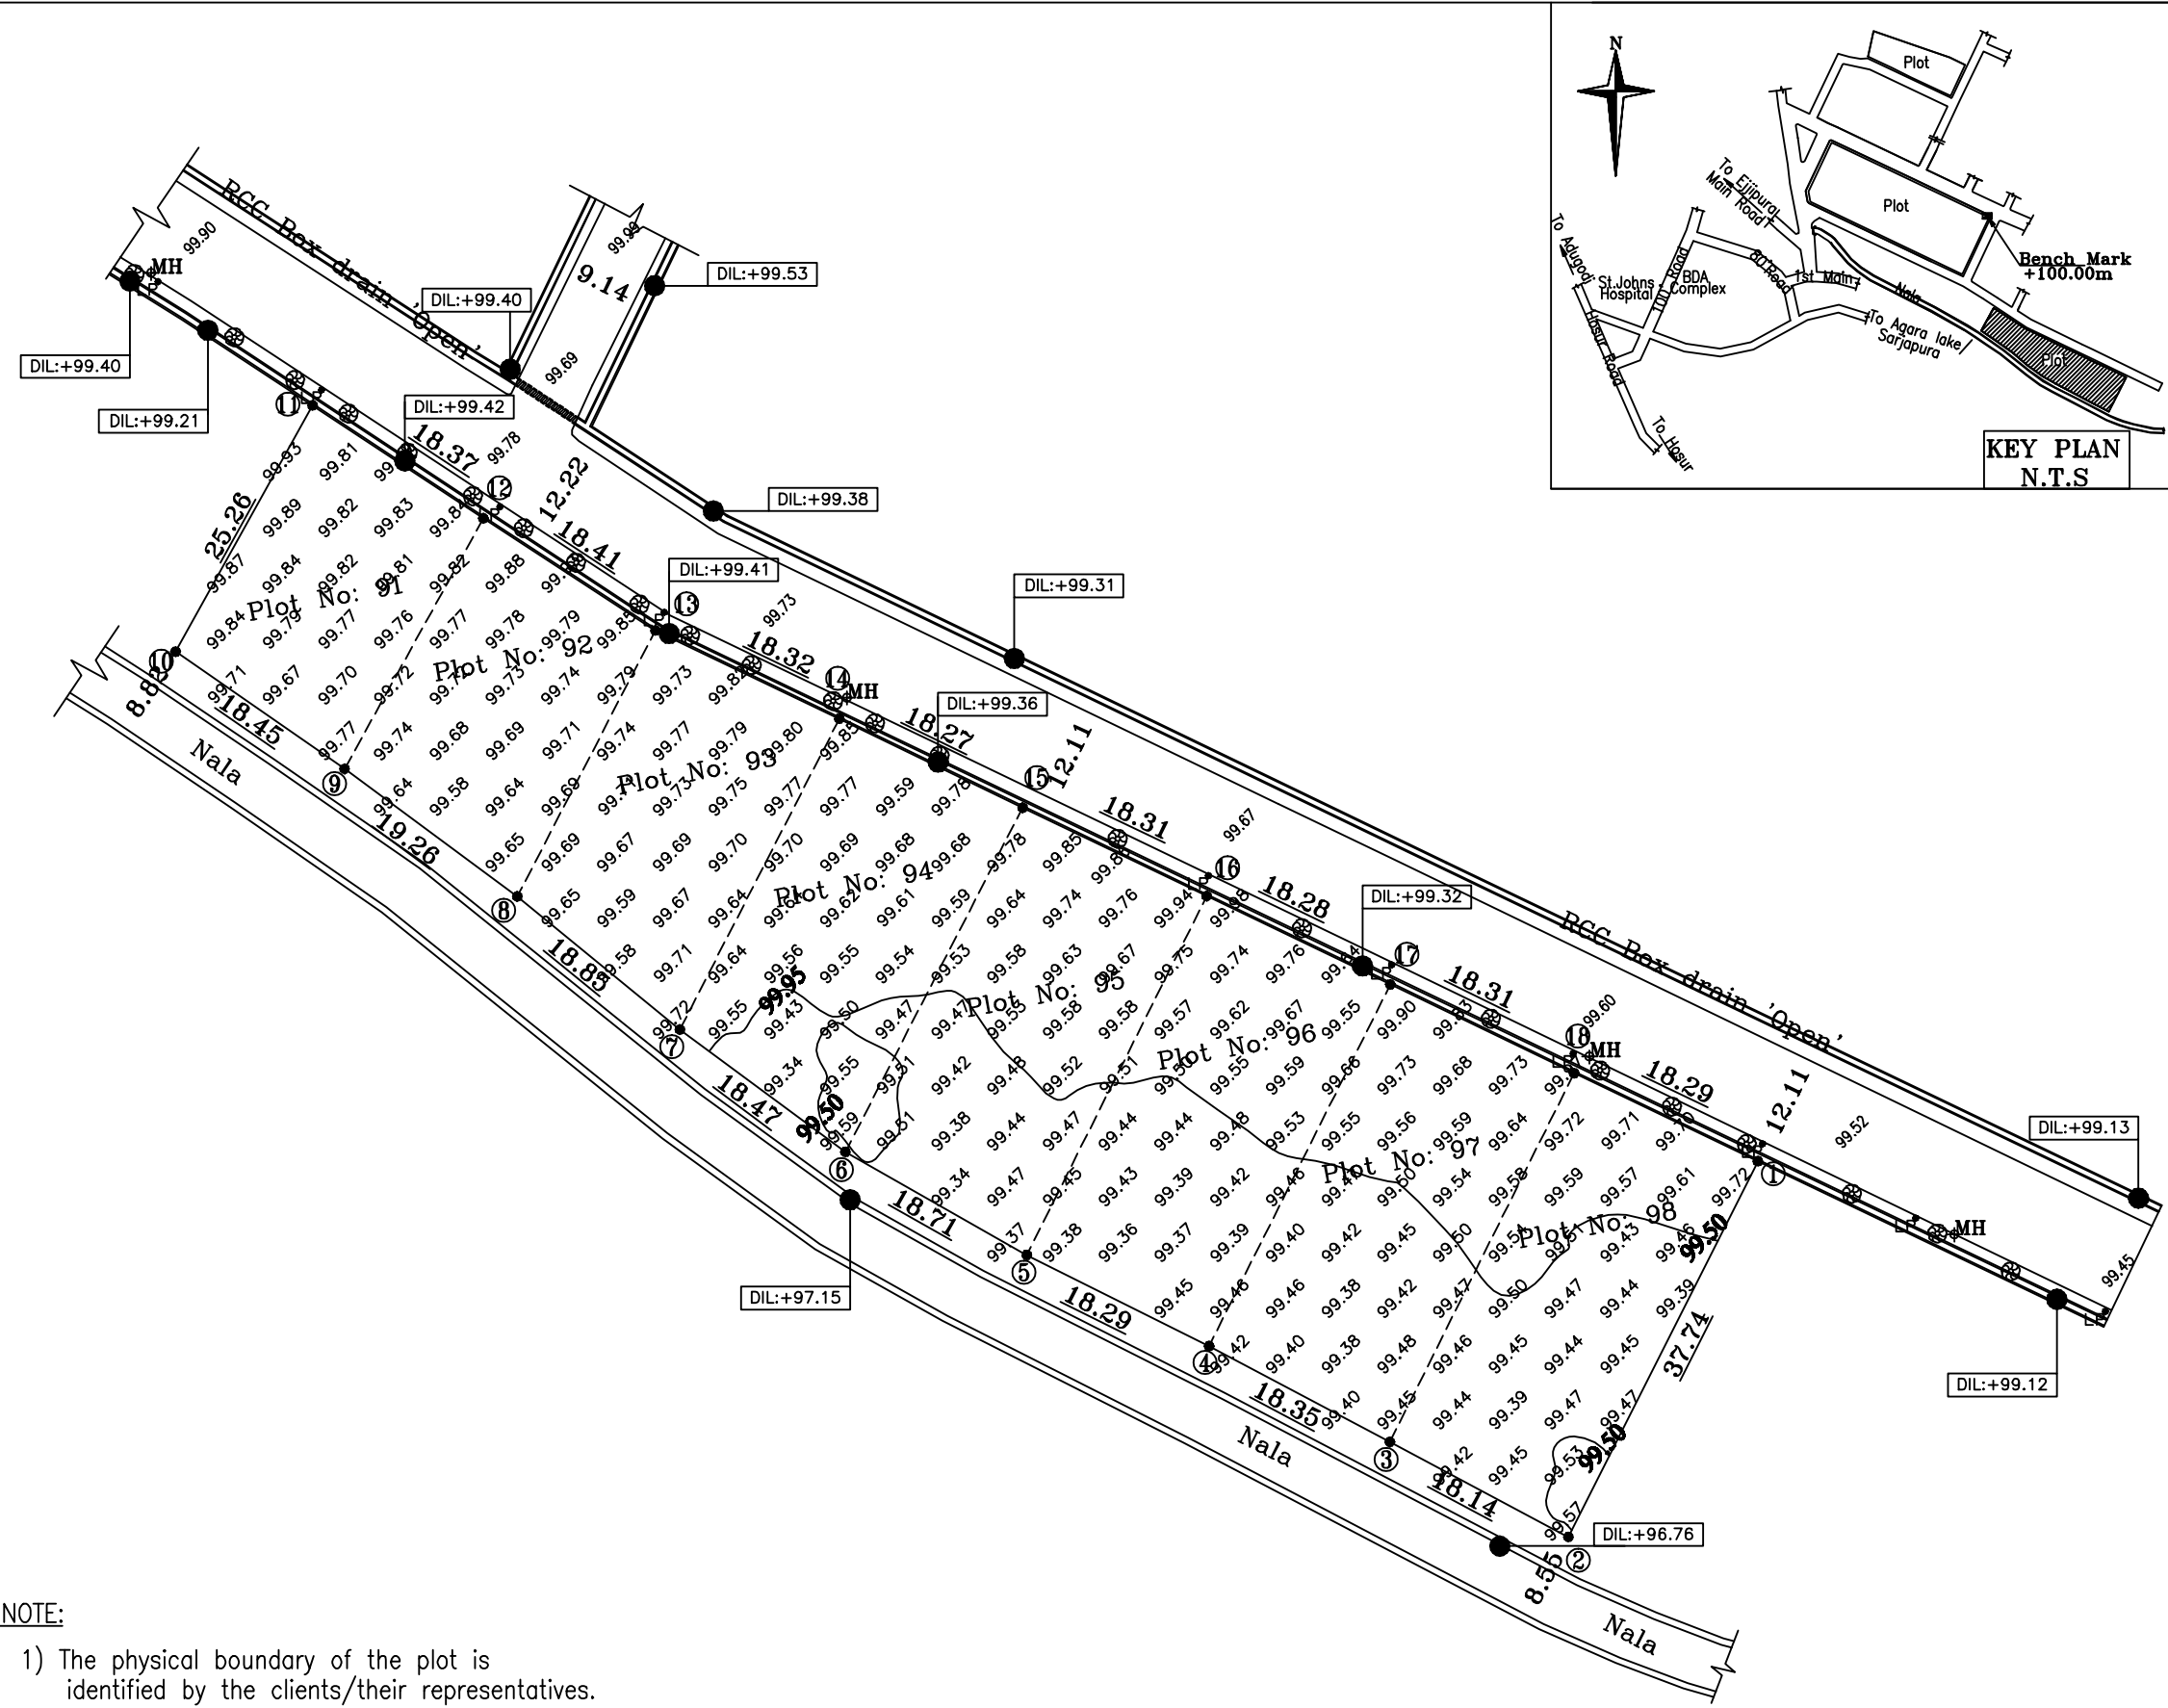


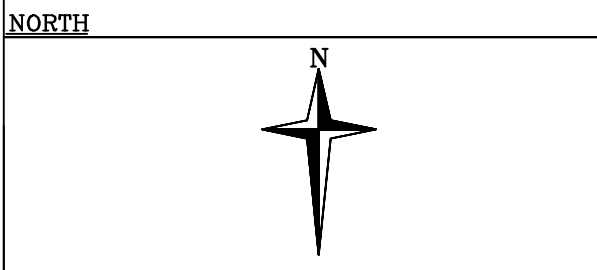

- NOTE:
- 1) The physical boundary of the plot is identified by the clients/their representatives.
 - 2) The Plot numbers mentioned in the title box are provided by the clients.

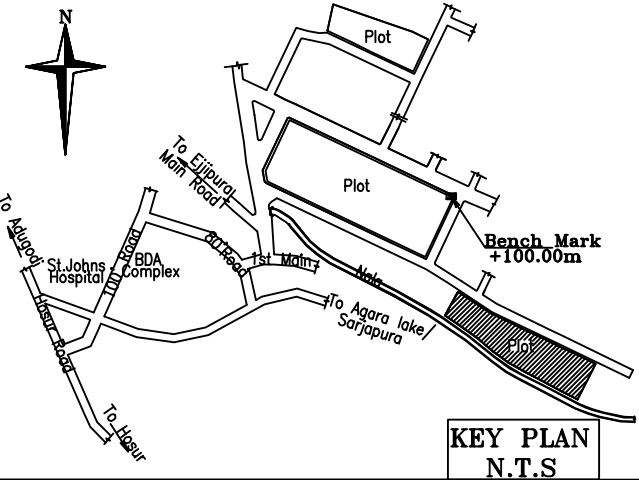

PERIPHERY DISTANCES			
LINE	PERIMETER DISTANCES IN METRES	LINE	PERIMETER DISTANCES IN METRES
1-2	37.74	10-11	25.26
2-3	18.14	11-12	18.37
3-4	18.35	12-13	18.41
4-5	18.29	13-14	18.32
5-6	18.71	14-15	18.27
6-7	18.47	15-16	18.31
7-8	18.85	16-17	18.28
8-9	19.26	17-18	18.31
9-10	18.45	18-1	18.29
TOTAL		358.08	

- NOTES:-
- 1. All Dimensions & levels are in metres.
 - 2. A Benchmark has been established on the Drain plinth as shown in the key plan and is assigned a value of +100.00m arbitrarily.
 - 3. Block levels have been taken at 5 meters.
 - 4. Contours have been drawn at 0.5m intervals.
 - 5. Distance along boundary points shown thus...**33.61**

AREA STATEMENT			
AREA IN SQ MT	AREA IN SQ FT	AREA IN	
4,762.35	51,260	ACRE	GUNTAS
		1	7.07

LEGEND	
DESCRIPTION	SYMBOL
BLOCK LEVEL	99.70
CONTOUR	99.50
MANHOLE	MH
DRAIN INVERT LEVEL	DIL:+98.60
LIGHT POLE	LP
RAINFORCED CEMENT CONCRETE DRAIN	RCC DRAIN
TREE	

TITLE:
TOPO-MAP OF PLOT NO:91,92,93,94,95,96,97& 98 AT NIRGUNA MANDIR LAYOUT, KORMANGALA 4TH BLOCK, BANGALORE.

CLIENTS:
MR. AVINASH AMARLAL BANGALORE.

IDX ROUTE :- COM9 :- D:\IDX FILES\SEP 2014\KORMANGALA
FILE ROUTE :-COM4 :-I:\DWG\SEP 2014\KORMANGALA NIRGUNA MANDIR LAYOUT

SCALE: 1:500	SEASON: SEP 2014	DRG. NO. PS-6302/2-R-0
SURVEYED BY: SRINIVAS	DRAFTED BY: ASHA.M	CHECKED BY: P.VENKATARAMANA

SURVEYED & MAPPED BY
PRECISION SURVEYS (INDIA) PVT LTD
NO:407, 9th CROSS, B.C.C. LAYOUT, CHANDRA LAYOUT IST STAGE, BANGALORE-40
PHONE-080-23392043, TELEFAX-080-23393603.
EMAIL: precision-surveys@rediffmail.com, precision-surveys@gmail.com

